




MOUNTING INSTRUCTIONS FOR

PTO ADAPTOR

MERCEDES G-60

KIT 021407003

01

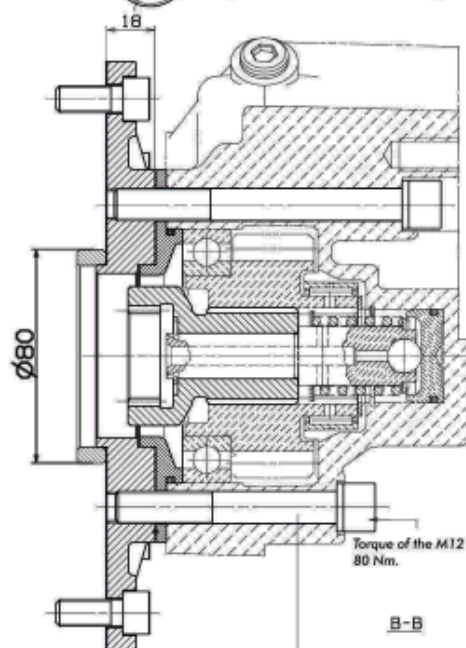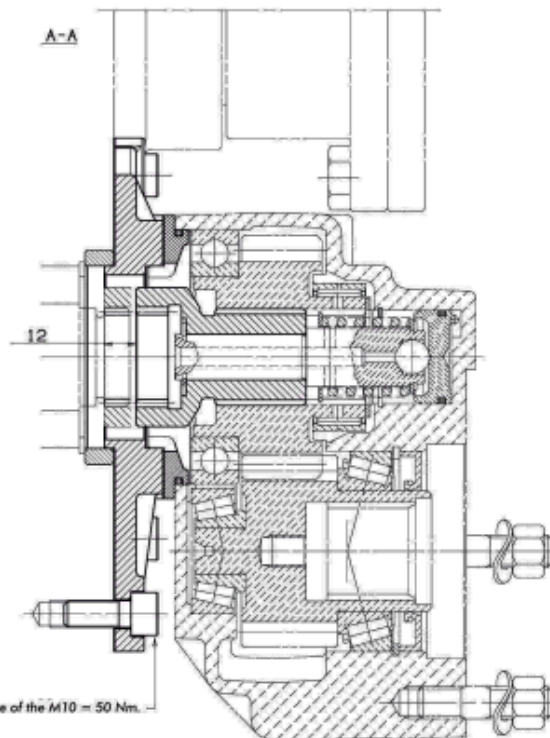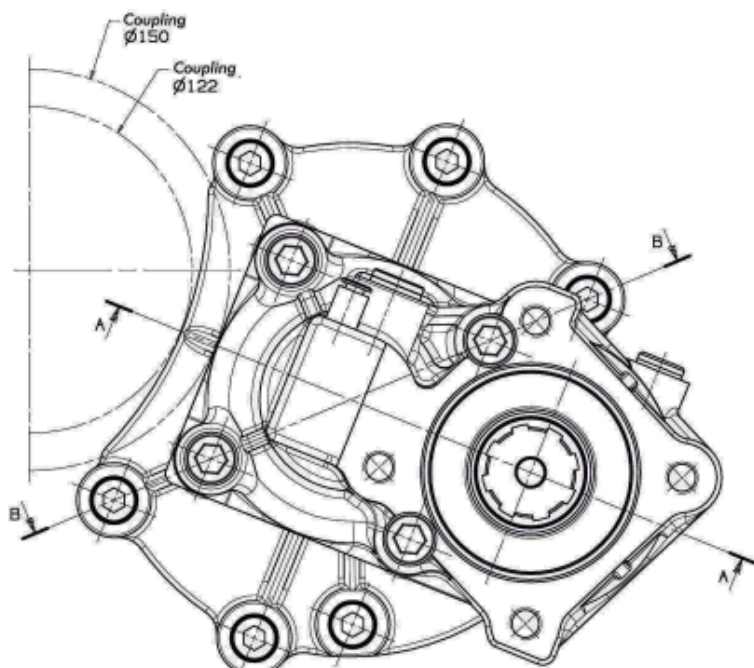

While mounting please check that the 4 screws TCE M12 are not stuck at the end of the threaded hole of the plate.

TIGHTENING TABLE

Thread	(mm)	M8	M10	M12	UNC 3/8	UNC 7/16
Screws - nuts	(Nm)	25	50	80	25	60
Studs	(Nm)	10	20	30	10	20